

OLED 屏幕软件的安裝和使用說明

Software Installation and Usage Instructions for PC SmartMonitor

第一部分：軟體安裝步驟

Part 1: Software Installation Steps

1. 以管理員權限運行 Run as administrator


- 鼠標選中應用程序圖標，右鍵選擇「以管理員身份運行」進行安裝。
- Right-click the application icon and select "Run as administrator" to begin the installation.



2. 選擇安裝路徑 Select the installation path


- 選擇安裝磁盤路徑。預設為 C 盤，直接點擊「Next」即可。

- Select the installation path. The default directory is the C drive; simply click "Next" to proceed.

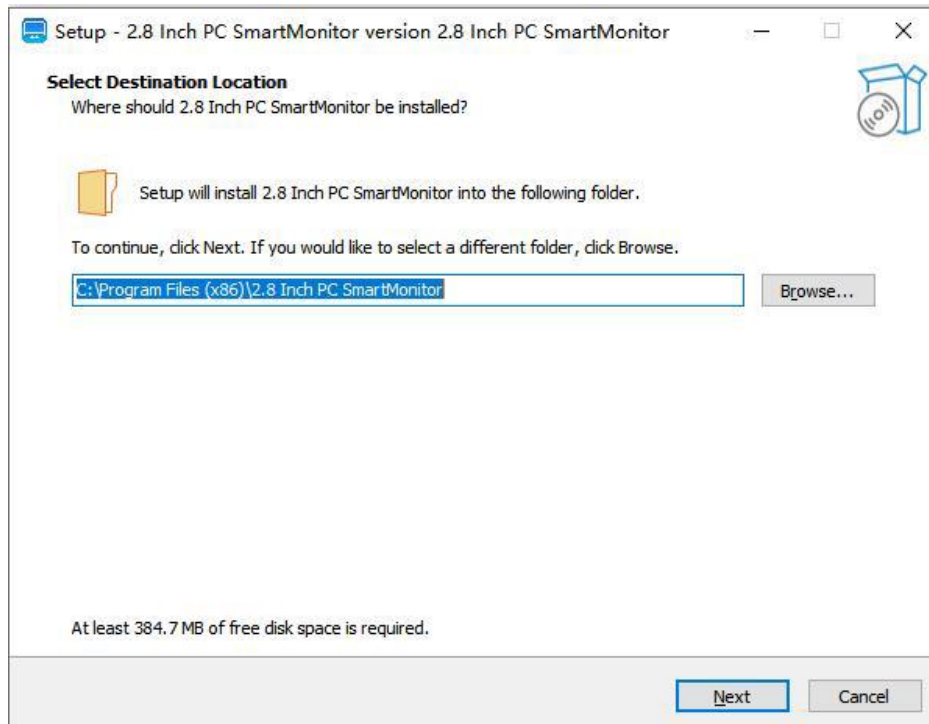


3. 創建桌面圖標 Create a desktop shortcut

- 勾選「Create a desktop shortcut」以創建桌面圖標，然後點擊下一步。
- Check the box to "Create a desktop shortcut," then click "Next" to proceed.

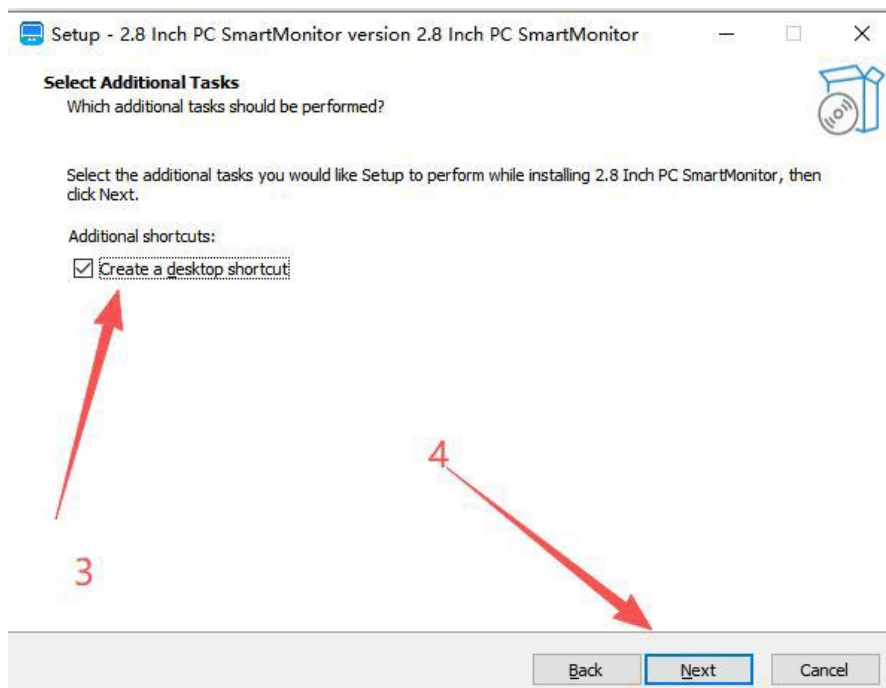

4. 確認安裝 Ready to install

- 確認所有設置無誤後，點擊「Install」開始安裝。
- Review your settings and click "Install" to start the installation process.

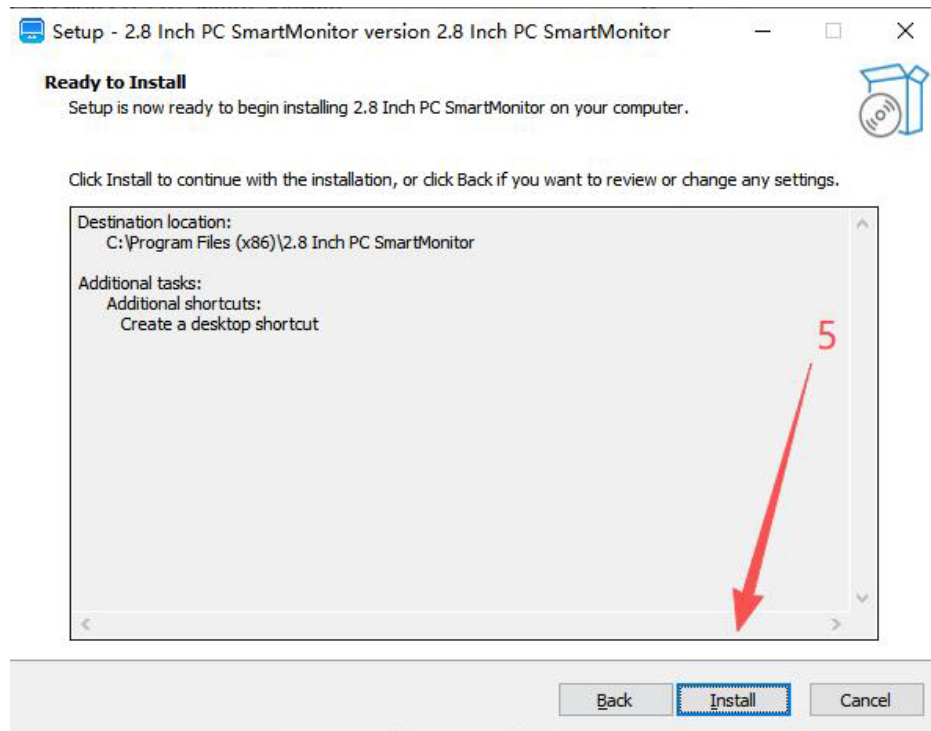

5. 安裝完成 Finish the install


- 安裝完成後，預設會勾選自動打開，點擊「Finish」完成安裝並啟動軟體。
- Once complete, the option to launch the software is selected by default. Click "Finish" to exit the setup and open the application.



第二部分：注意事項與異常處理

Part 2: Notes and Troubleshooting

- **系統支援 (System Support)：** 目前軟體僅支援 **Windows 10/11** 系統。
 - The software currently only supports **Windows 10 and Windows 11**.
- **讀取異常 (Reading Issues)：** 若軟體無法讀取數據，請嘗試卸載並重新以「管理員權限」安裝運行。
 - If data is not reading correctly, please uninstall and reinstall the application using administrator privileges.
- **缺失 MSVCP140.dll (Missing DLL)：** 若提示找不到此文件，請安裝微軟官方 VC 運行庫 (X64 版本)。
 - If "MSVCP140.dll not found" error occurs, install the official Microsoft VC++ Redistributable (X64 version).

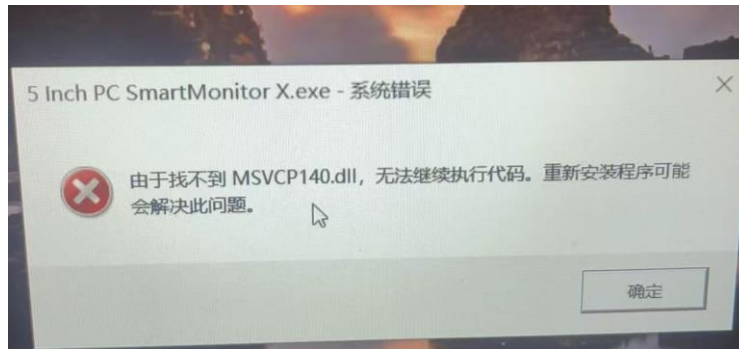

处理办法：安装微软官方 vc 运行库，安装 X64 版本插件即可。

Solution: Install the official Microsoft VC runtime library and then install the x64 version of the plugin.

下载链接 Download link:

<https://learn.microsoft.com/zh-cn/cpp/windows/latest-supported-vc-redist?view=msvc-170>

最新Microsoft Visual C++ 可再发行版本

最新版本是 `v14.44.35208.0`

使用以下链接为每个受支持的体系结构下载此版本:

展开表


体系结构	链接	说明
ARM64	https://aka.ms/vs/17/release/vc_redist.arm64.exe	最新受支持 ARM64 版本的永久链接
X86	https://aka.ms/vs/17/release/vc_redist.x86.exe	最新受支持 x86 版本的永久链接
X64	https://aka.ms/vs/17/release/vc_redist.x64.exe	最新受支持 x64 版本的永久链接。X64 可再发行程序包包含 ARM64 和 X64 二进制文件。当 X64 可再发行程序包安装在 ARM64 设备上时，可以通过此包轻松安装所需的 Visual C++ ARM64 二进制文件。

从 my.visualstudio.com 下载其他版本，包括长期服务发布渠道 (LTS) 版本。


说明

第三部分：软件使用說明: 首次安装使用上位机必须以管理员权限安装打开运行。

Part 3: Software User Guide: When installing and using the PC software for the first time, you must run the installer and the application as an administrator.

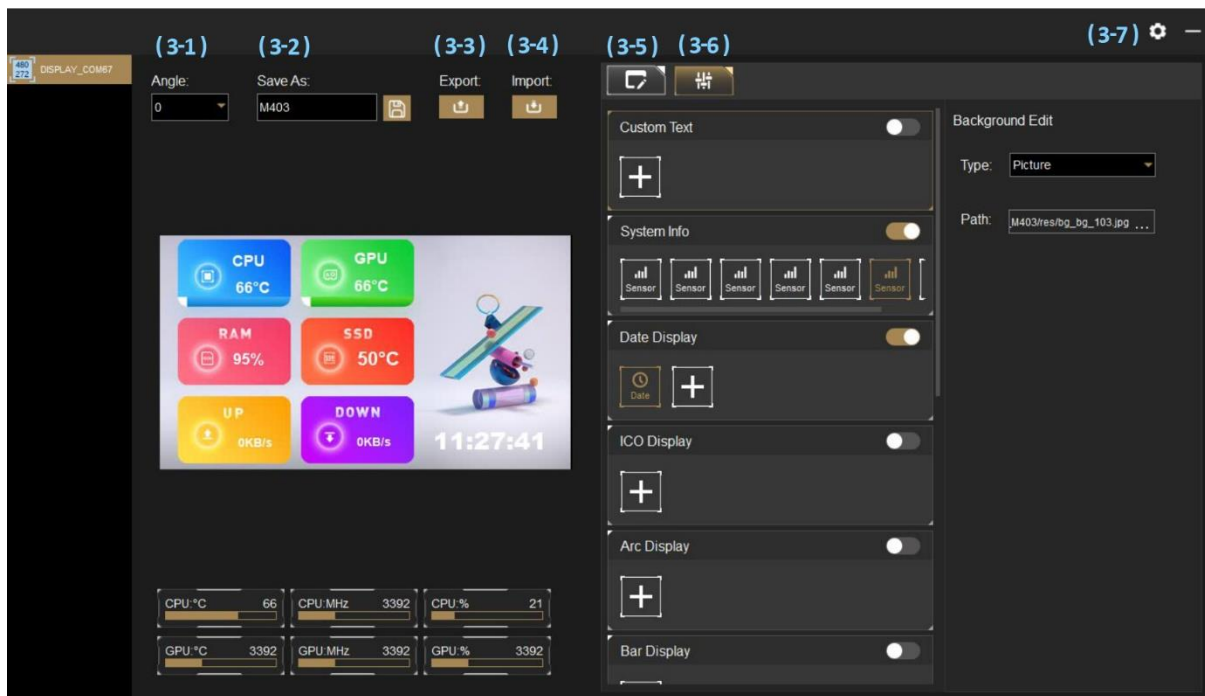


3-1 角度旋轉 (Angle)：支援 0°/90°/180°/270° 旋轉（圓形/正方形屏幕支援四向，長方形僅支援正反向）。

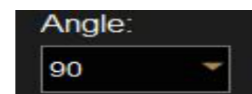


- Supports rotation in four directions. Note: Rectangular screens only support forward and backward rotation.

3-2 主題保存 (Save As)：每次更改主題後需「另存為」新主題名（建議使用文字或字母），否則更改可能不會生效。当主题名称不变的时候会直接覆盖原有主题。

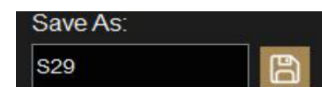


- You must "Save As" a new theme name (preferably using letters or text) after every change; otherwise, the changes may not take effect. If the theme name remains unchanged, it will directly overwrite the existing theme

3-3 导出主题 (Export Theme)：導出現有主題

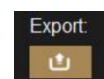

- Export current theme

3-4 导入主题 (Import Theme)：導入現有主題

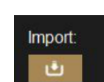


- Import an existing theme

3-5 功能编辑按钮 (Function Edit Button)： 點擊此按钮可進入詳細編輯頁面，對各項監控控件進行自定義設置。



- Click this button to enter the detailed editing page to customize various monitoring and display controls.

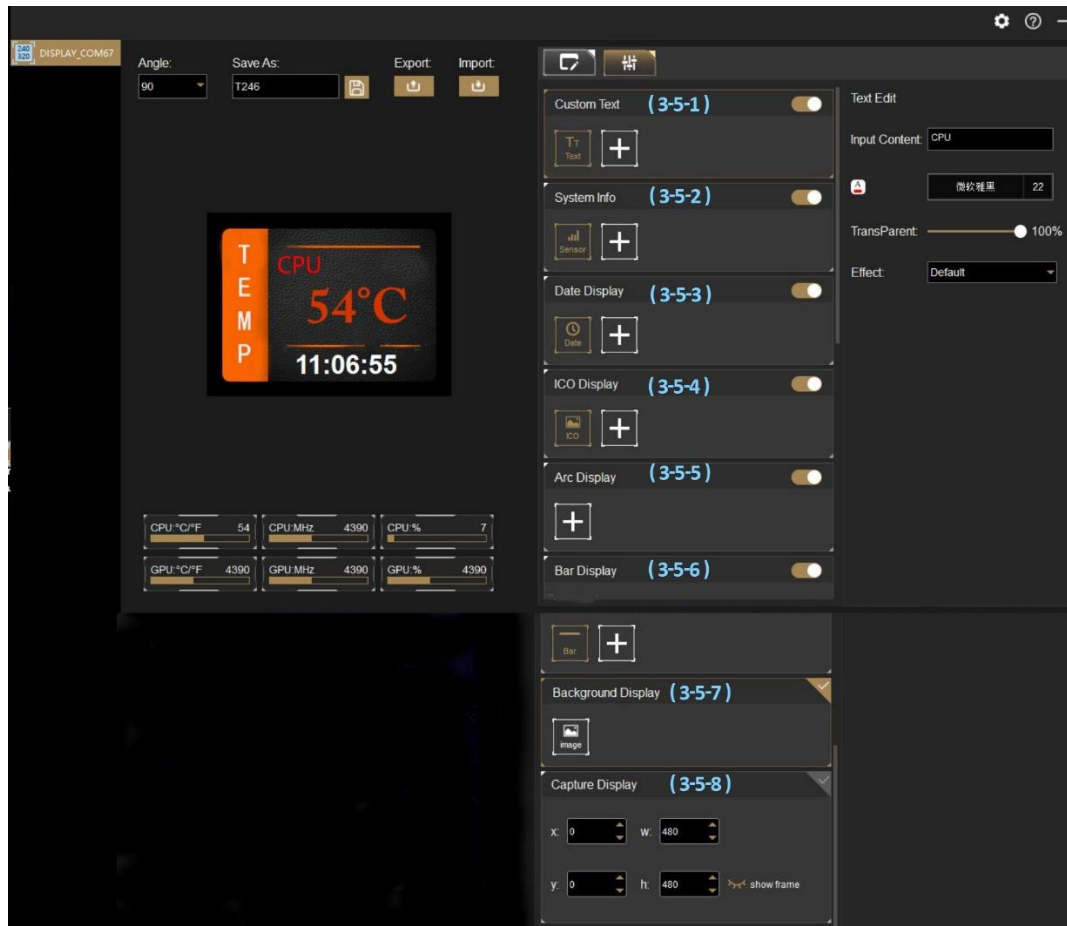

3-5-1 本文控件 (Custom Text)： 打开可自由添加文本，支持调节文本大小、字体、颜色等，同时选中预览界面的文本可自由删除。Open to freely add text, supporting adjustments to size, font, and color. Additionally, text selected in the preview interface can be deleted at any time.

3-5-2 系统数据 (System Info)： 用来选择显示需要监控的硬件数据，可自由设置数据的颜色、字体、大小等。Used to select and display the hardware data you wish to monitor. You can freely customize the color, font, size, and other settings for the displayed data.


3-5-3 时间显示 (Date Display)： 该控件用来显示时间日期等信息。This control is used to display information such as time and date.

3-5-4 ICO 图标显示 (ICO Display) : 这个控件用来显示圆环的模式，可以设置圆环大小、形状、颜色等 Used to display small localized icons on top of the background layer.

3-5-5 圆环显示 (Arc Display) : 这个控件用来显示圆环的模式，可以设置圆环大小、形状、颜色等。This control is used to display circular or arc patterns. You can customize the size, shape, color, and other attributes of the arc.

3-5-6 进度条显示 (Bar Display) : 这个控件用来百分比数值的进度，可以设置进度条的大小，形状颜色等。This control is used to display progress as a percentage. You can customize the size, shape, color, and other attributes of the progress bar.

3-5-7 背景显示 (Background Display) : 可以用来设置纯色、图片、视频等作为主题背景。选中的背景素材支持缩放旋转及裁剪功能，裁剪完成点击 OK 等待处理完成替换背景。Used to set solid colors, images, or videos as the theme background. The selected background material supports scaling, rotation, and cropping. After cropping, click "OK" and wait for the process to complete to replace the background.

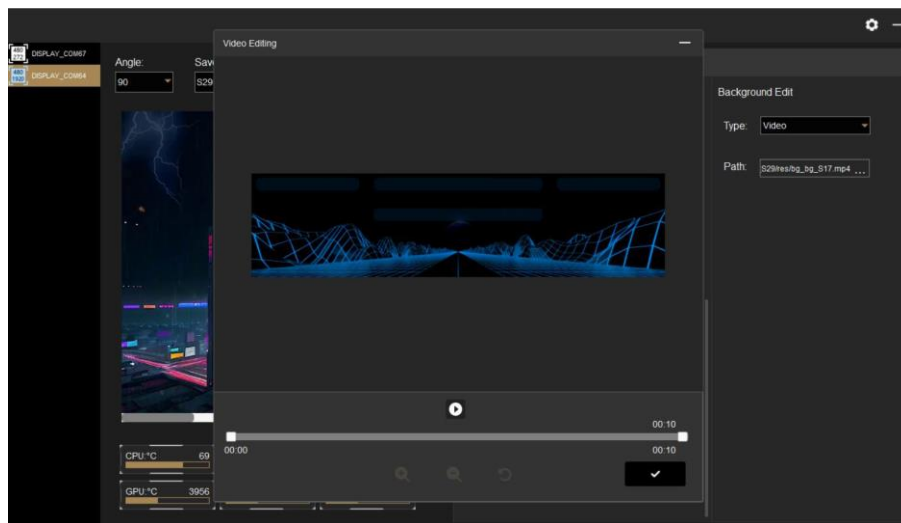


3-5-8 投屏显示 (Capture Display) : 可以设置投屏的像素、坐标把电脑的桌面投射到小屏上。Allows you to set the pixels and coordinates to project a specific area of your PC desktop onto the small screen.

3-6 主题预览与管理 (Theme Preview and Management) : 点击进入预览主题页面，鼠标双击预览的主题可以快速切换，选中不需要的主题可以右键自由删除主题。



- Click to enter the theme preview page. Double-click a theme thumbnail to switch themes quickly. To remove an unwanted theme, simply select it and right-click to delete.

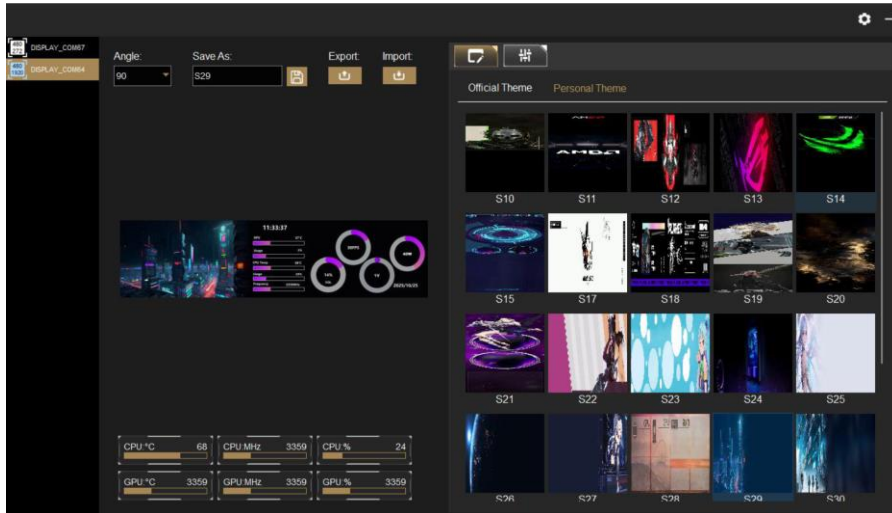

3-7 系统设置 (Setting/About)：支持自启动设置、最小化到托盘、摄氏/華氏單位切換、語言切換以及亮度調節等功能。



- Supports features such as Auto Run, Minimize to tray, Unit toggle (C/F), Language selection, and Brightness adjustment.

